

Camping TV User Manual



First Time Installation

Connecting a TV aerial or satellite dish to your TV

To use with a satellite dish (for Freesat or other DVB-S/S2 channels)

Connect your dish to the TV's input marked "ANT IN DVB-S/S2".



To use with an aerial (for Freeview, Saorview etc. or other DVB-T2 channels)

Connect a TV Aerial to the TV's input marked "ANT IN DVB-C/T2".



First Time Installation

When you first turn your TV on you will see the First Time Installation screen, you can also start the first time installation procedure by pressing the menu button and using the ◀ / ▶ buttons to move to the setup menu and then use the ▼ / ▲ buttons to select "First Time Installation" and press OK.

Select Language


Press ◀ / ▶ button to select the language to be used for menus and messages.

Select Country

Press ▼ / ▲ button to highlight country menu.

Press ◀ / ▶ button to select the country you are in.

Press the OK button.

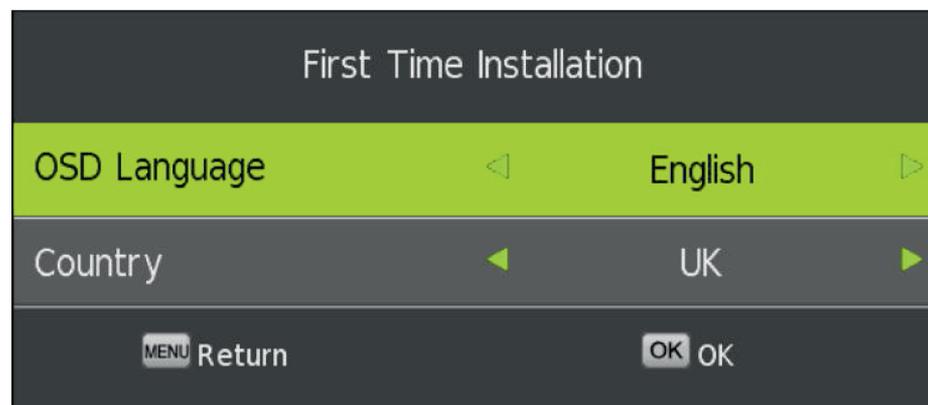

Select Connection Type

Press ▼ / ▲ button to highlight TV Connection menu.

Press ◀ / ▶ button to select the type of connection you are using.

Antenna for use with a TV antenna (Freeview, Saorview etc.)

Satellite for use with a satellite dish (Freesat or other free-to-air satellite TV)

Cable for a cable television service.

Set Tune Type to DTV

Press the OK button.



To use with a satellite dish (DVB-S2 eg. Freesat.)

Load the preset channel database

On the “Satellite AutoTuning Setting” menu leave the Scan Mode set to Normal Scan and press OK
Press ◀ / ▶ button to select the satellite to use, eg. ASTRA 2E,2F,2G for the UK Freesat service.

Move down to Scan Mode and use the ◀ / ▶ button to select Preset.

Move down to Search and press the OK button.


When you see the message “Do you want to start Satellite Autoscan” press the left arrow button to confirm.

Wait for the Database to be imported, when finished the TV enters viewing mode.

Press OK to view the channel list.

Press the GREEN button to select the satellite list, highlight the satellite you wish to view channels for and press OK

To perform a fresh auto scan or blind scan see page 7

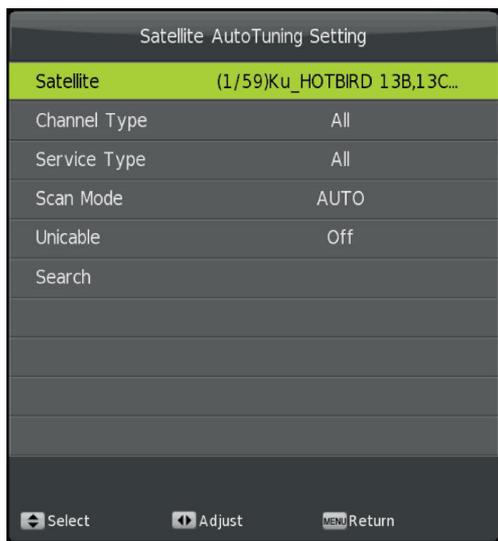

TIP: You can press the AQT (Auto Quick Tune) button on the remote control to jump straight to the Auto Tuning menu if you need to retune.

To use with an aerial (DVB-T2 eg. Freeview, Saorview etc.)


Wait for tuning to finish and then the TV enters viewing mode.

Press OK to view the channel list.



TIP: You can press the AQT (Auto Quick Tune) button on the remote control to jump straight to the Auto Tuning menu if you need to retune.

SELECT INPUT SOURCE

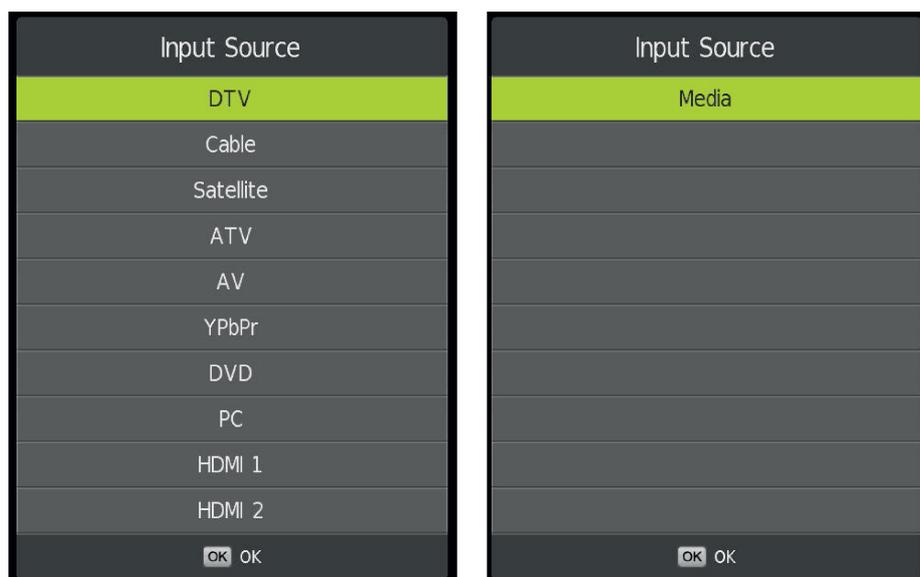

Press the **SOURCE** button to display the input source list,

Press **▼ / ▲** or **OK** button to select the input source you want,

Press **OK** button to enter the input source or press the **EXIT** button to quit.

The available inputs are:

DTV: Digital TV with an aerial (DVB-T2 eg. Freeview, Saorview etc.)

Cable: For cable TV services outside the UK

Satellite: For use with a satellite dish (DVB-S2 eg. Freesat.)

ATV: Analogue TV with an aerial.

AV: For connection of a composite video and audio signal to the Mini AV socket.

YPbPr: For connection of a component video signal to the Mini Y/Pb/Pr socket.

DVD: For playing a DVD or CD using the built in DVD player.

PC: For connection of a computer to the VGA socket.

HDMI1: For the HDMI 1 socket.

HDMI2: For the HDMI 2 socket.

Media: For playback of media connection to the USB socket on the side of the TV.

Main Menu Operation

Channel Menu

Press **MENU** button to display the main menu.
Press ◀ / ▶ button to select **CHANNEL** in the main menu.

In Antenna Source.



1. Press ▼ / ▲ button to highlight the option that you want to adjust in the **CHANNEL** menu.
2. Press **OK** button to select the highlighted option.
3. After finishing your adjustment, Press Menu button to save and return to the previous menu.

Auto Tuning

Press ▼ / ▲ button to select Auto Tuning, then press **OK** button to enter.
Select the correct country and press **OK**.



TIP: You can press the AQT (Auto Quick Tune) button on the remote control to jump straight to the Auto Tuning menu if you need to retune.


DVB-T Manual Tuning

Press ▼ / ▲ button to select DVB-T Manual Tuning, then press **OK** button to enter sub-menu.
Press ◀ / ▶ button to select channel, then press **OK** button to search program.



Program Edit (reordering the channel list)

Press ▼ / ▲ button to select Program Edit, then press **OK** button to enter sub-menu.

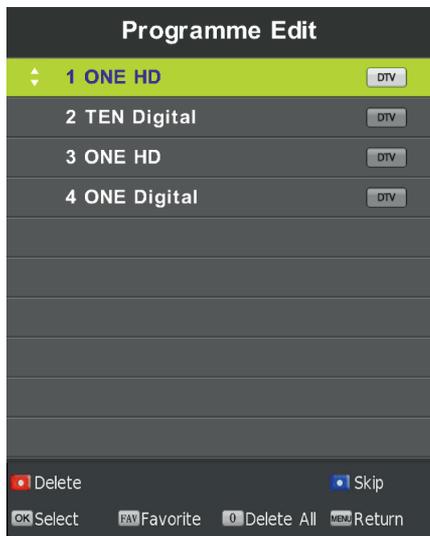

The three colored keys are shortcut keys for programming the channel.

First press ▼ / ▲ to highlight the channel you want to select, then:

Press the **Red** button to delete the program in the list.

Press the **Yellow** button to move the channel in favourite list.

Press the Blue button to skip the selected channel.

Press Fav button to add or remote the channel to your favourite list.

(Your TV set will skip between these channels automatically when using CH+/- to view the channels.)

The CHANNEL List in Satellite Source.



Auto Tuning


Press **▼ / ▲** button to select Auto Tuning, then press **OK** button to enter.



Press **MENU** button to bring up the main menu. Highlight "Channel" using navigation buttons and press **OK**. Then highlight "Auto Tuning" and press **OK** to enter.

- Satellite:** Select an available satellite.
- Channel Type:** Select a channel type.
- Service Type:** Select a service type.
- Scan Mode:** Select your scan mode.
- Unicable:** Select Off

Select Search and press **OK**.

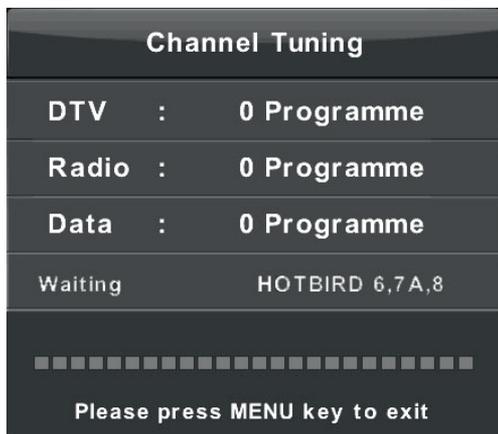

TIP: You can press the AQT (Auto Quick Tune) button on the remote control to jump straight to the Auto Tuning menu if you need to retune.

Satellite Edit

Press **▼ / ▲** button to select **Satellite Edit** then press **OK** button to enter.

Satellite		
(01/59)	Ku_ASTRAS 1H,1KR,1L,&h)L	019.2 E
(02/59)	Ku_ASTRAS 2A,2B,2D	028.2 E
(03/59)	Ku_ASTRAS 1E,1G,3A	023.5 E
(04/59)	Ku_NILESAT 101, 10	007.0 W
(05/59)	Ku_EUTELSAT W3A	007.0 E
(06/59)	Ku_EUTELSAT W1	010.0 E
(07/59)	Ku_BADR-2,3,4/EURO	026.0 E
(08/59)	Ku_EUTELSAT SESAT	036.0 E
(09/59)	Ku_EUTELSAT W2	016.0 E
(10/59)	Ku_EXPRESS AM1	040.0 E

⊖ Delete Satellite ⊕ Add Satellite

⏪ Select OK OK MENU Return

Highlight the satellite to edit and press **OK**.


Select the field to change and the **◀ / ▶** buttons to change the settings.

Satellite	
Satellite Name	ASTRA 1H,1KR,...
Orbit Position	019.2 E
LNB Type	Universal
DiSEqC1.0	Off
DiSEqC1.1	Off
Tone 22KHz	AUTO
TransPonder	
Unicable Setting	On
Motor	DiSEqC1.2

⏪ Select ⏩ Select MENU Return

Picture Menu

Press **MENU** button to display the main menu.
Press ◀ / ▶ button to select **PICTURE** in the main menu.

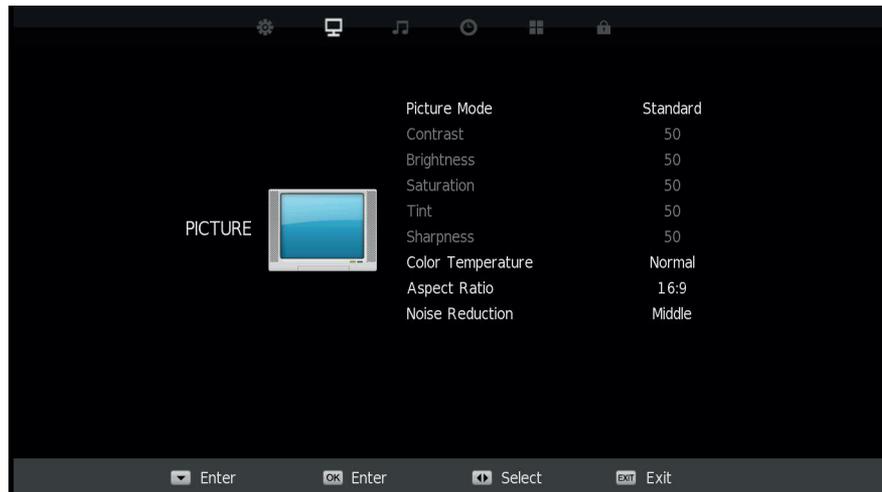

1. Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Picture Mode

Press ▼ / ▲ button to select Picture Mode, then press **OK** button to enter sub-menu.
Press ◀ / ▶ to cycle through the modes Standard, Dynamic, Mild and User.

Note: You can change the value of contrast, brightness, saturation, tint and sharpness manually when set to **Standard** mode.

Contrast/ Brightness/ Saturation/ Sharpness/Tint

Press ▼ / ▲ button to select option, then press ◀ / ▶ button to adjust.

Contrast Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

Brightness Adjust the optical fiber output of the entire picture, it will effect the dark region of the picture.

Saturation Adjust the saturation of the colour based on your own like.

Sharpness Adjust the peaking in the detail of the picture.

Tint (NTSC only) Use in compensating color changed with the transmission in the NTSC code.

TIP: In viewing mode you can press PMODE button to cycle through the picture modes quickly.

Color Temp

Change the overall color cast of the picture.

Press ▼ / ▲ button to select Colour Temperature, then ◀ / ▶ to cycle through the options:

- Normal** No adjustment
- Cold** Increase the blue tone for the white.
- Warm** Increase the red color for the white.

Aspect Ratio

Manually change the aspect ration of the picture

Press ▼ / ▲ button to select Aspect Ratio, then ◀ / ▶ to cycle through the options:

16:9 (default), Zoom1, Zoom2, Auto, 4:3

Noise Reduction


To filter out and reduce image noise and improve picture quality.

Press ▼ / ▲ button to select Noise Reduction, then ◀ / ▶ to cycle through the options:

- Off** Select to turn off video noise detection.
- Low** Detect and reduce low video noise.
- Middle** Detect and reduce moderate video noise (default)
- High** Detect and reduce enhanced video noise.

Sound Menu

Press **MENU** button to display the main menu.
Press ◀ / ▶ button to select **SOUND** in the main menu.

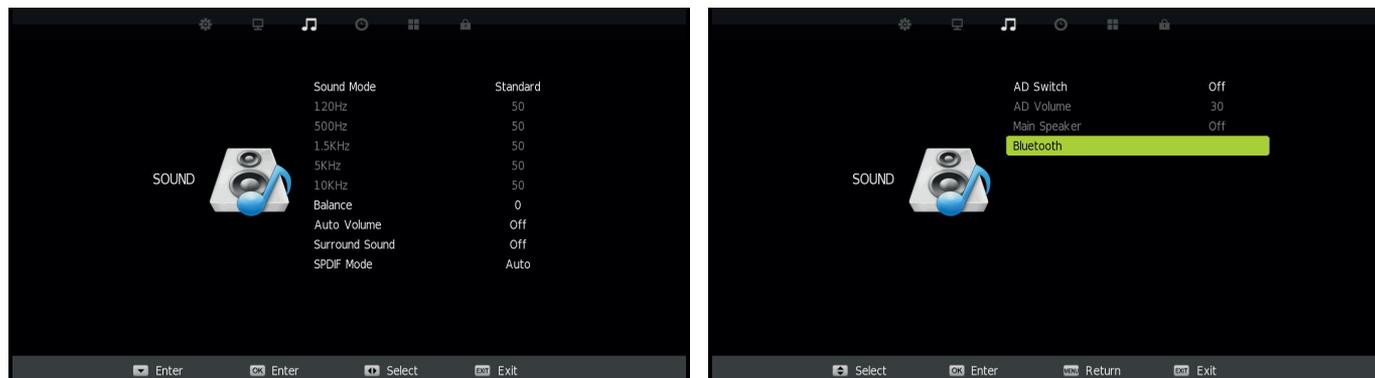

1. Press ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **Enter** button to save and return to the previous menu.

Sound Mode

Press ▼ / ▲ button to select Sound Mode, then ◀ / ▶ to cycle through the options:

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals for sports.
User	Select to customise sound settings.

In User mode you can manually adjust the sound frequencies in the ranges:
120Hz, 500Hz, 1.5KHz, 5KHz, 10KHz

TIP: In viewing mode you can press SMODE button to cycle through the sound modes quickly.

Balance

Press ▼ / ▲ button to select option, Press ◀ / ▶ button to adjust.

Auto Volume level

This reduces the difference between channel and programme volumes automatically
Press ▼ / ▲ button to select Auto Volume Level, then press ◀ / ▶ button to select On or Off.

Surround Sound

Press ▼ / ▲ button to select Surround Sound, then press ◀ / ▶ button to select Surround or Off.

SPDIF Mode

Press ▼ / ▲ button to select SPDIF Mode, then press ◀ / ▶ button to select Off / PCM / Auto.

AD Switch (Audio Description)

Press ▼ / ▲ button to select AD Switch, then press ◀ / ▶ button to select On or Off.

AD Volume (Audio Description Volume)

When AD Switch is On Press ▼ / ▲ button to select AD Volume, then press ◀ / ▶ button to adjust volume of audio description.

Bluetooth

The Bluetooth function allows you to play the audio from the TV through a Bluetooth audio device such as a soundbar, speaker or headphones.

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SOUND** in the main menu.

Select Bluetooth from the Sound menu to bring up the Bluetooth sub-menu:



Turning on Bluetooth

Press ▼ / ▲ button to select Bluetooth and then press ◀ / ▶ to switch between On and Off.

Pairing a new device

Press ▼ / ▲ button to select Bluetooth Pair and press the **OK** button.

The TV will start to search for nearby Bluetooth audio devices, make sure your speaker or headphones are turned on and discoverable.

While the TV is searching you will see a “Searching...” message in the middle of the screen.

When searching is complete you will see a list of the devices found, press the ▼ / ▲ buttons to select the device you want to use and press the **OK** button to connect to the device.



Disconnecting a Bluetooth device

To disconnect a Bluetooth device you can turn the device off and the TV will automatically switch the sound back to the TV after a few seconds.

You can also disconnect the device from the TV as follows:

Press the ▼ / ▲ buttons to select Disconnect and press the **OK** button.


The currently connected device will be disconnected and the sound will be played via the TV.

Reconnecting a device

If you have previously searched for a Bluetooth device you can reconnect to it by selecting it from the Bluetooth Paired List.

Press the ▼ / ▲ buttons to select Paired List and press the **OK** button.

Press the ▼ / ▲ buttons to select the device you want to use and press the **OK** button to connect to the device.

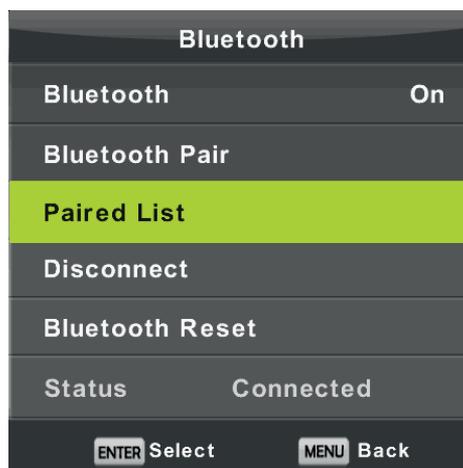

Bluetooth Reset

To reset the Bluetooth settings and delete all discovered devices:

Press the ▼ / ▲ buttons to select Bluetooth Reset and press the **OK** button.

Time Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **TIME** in the main menu.



Clock

Press ▼ / ▲ button to select Clock and then press **OK** to open the submenu.

Press ▼ / ▲ button to select each entry, then ◀ / ▶ to adjust the date, month, year, hour and minute.

Off Time

The TV will automatically enter standby mode at the this time.

Press ▼ / ▲ button to select Off Time and then press **OK** to open the submenu.

Press ▼ / ▲ button to select Off Time and then ◀ / ▶ to cycle through the options:
Once, Every Day, Mon.~Fri., Mon.~Sat., Sat.~Sun., Sunday.

Press ▼ / ▲ button to select Hour, then ◀ / ▶ to adjust the hours.

Press ▼ / ▲ button to select Minute, then ◀ / ▶ to adjust the minutes.

On Time

The TV will automatically turn on from standby mode at the this time.

Press ▼ / ▲ button to select Off Time and then press **OK** to open the submenu.

Press ▼ / ▲ button to select Off Time and then ◀ / ▶ to cycle through the options:
Once, Every Day, Mon.~Fri., Mon.~Sat., Sat.~Sun., Sunday.

Press ▼ / ▲ button to select Hour, then ◀ / ▶ to adjust the hours.

Press ▼ / ▲ button to select Minute, then ◀ / ▶ to adjust the minutes.

Press ▼ / ▲ button to select the source, then ◀ / ▶ to choose the source to turn on.

Press ▼ / ▲ button to select Channel, then ◀ / ▶ to select the channel to tune to.

Press ▼ / ▲ button to select Volume, then ◀ / ▶ to set the volume used when the TV is turned on.

Sleep Timer

Press ▼ / ▲ button to select Sleep Timer, then ◀ / ▶ to cycle through the options:

Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min.

The TV will turn off after the set time has passed.

Auto Standby


Press ▼ / ▲ button to select Auto Standby, then ◀ / ▶ to cycle through the options:

Off, 3 H, 4 H, 5 H.

The TV will automatically turn off after the preset time if no remote control buttons are pressed. Pressing a button will reset the timer.

Time Zone

Press ▼ / ▲ / ◀ / ▶ button to select time zone and then **Menu** to return to the Time menu.

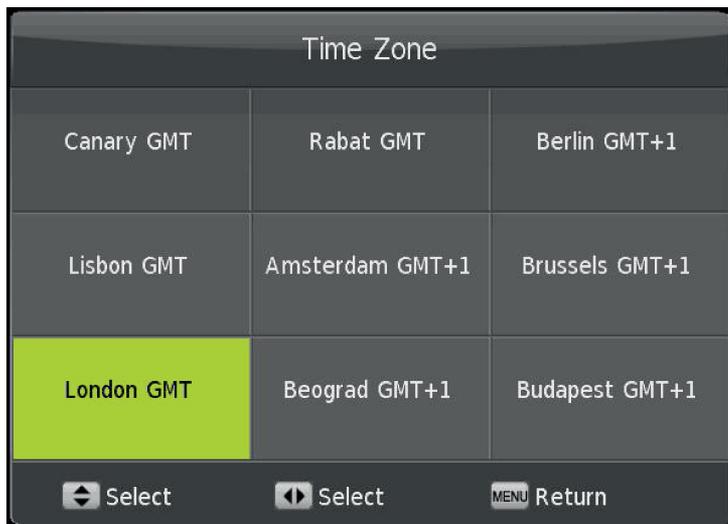

OSD Timer

Press ▼ / ▲ button to select OSD Timer, then ◀ / ▶ to cycle through the options:
5, 10, 15, 20, 25, 30, Always.

This controls how long the OSD (On Screen Displays) menus will stay on screen after a button is pressed. If set to Always the OSD will remain on screen until you press the Exit button.

Option Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SETUP** in the main menu.



OSD Language

Select a language for the OSD (On Screen Display) menus. The default language is English.

Press ▼ / ▲ button to select OSD Language and then **OK** to open the submenu.

Press ▼ / ▲ / ◀ / ▶ button to select the language and then **Menu** to return to the Option menu.



TT Language

Press ▼ / ▲ button to select TT Language, then ◀ / ▶ to cycle through the options: West, East, Russian, Arabic, Persian.

Audio Language

Press ▼ / ▲ button to select Audio Language, then press **OK** button to enter the sub-menu.

Press ▼ / ▲ / ◀ / ▶ buttons to select the Audio Language.

Press **Menu** to return to the Option menu.



Subtitle Language

Press ▼ / ▲ button to select Subtitle Language, then press **OK** button to enter the sub-menu.

Press ▼ / ▲ / ◀ / ▶ buttons to select the Subtitle Language.

Press **Menu** to return to the Option menu.



Hearing Impaired

Press ▼ / ▲ button to select Hearing Impaired, then press ◀ / ▶ to select On or Off.

PVR File System

Settings for the Personal Video Recorder (PVR) function. A USB device (USB stick/thumb drive or hard drive must be connected to the TV, maximum size 1TB formatted in FAT32 or NTFS).

Press ▼ / ▲ button to select PVR File System, then press **OK** button to enter sub-menu.

If you have more than one USB device connected press **OK** to select the disk.

Press ▼ / ▲ button to select Check PVR File System, then press **OK** button to enter. This will check the USB format, speed and size.



Format

Press ▼ / ▲ button to select Format, then press **OK** button to enter sub-menu.

This will show you the maximum recording time for SD and HD recordings and allow you to format (wipe clean) the device.

CAUTION: Formatting the device will permanently delete **ALL** files from the device not just TV recordings.

Time Shift Size

The Time Shift Size sets how much disk space will be allowed to be used for time shift recordings, ie. how long you can pause or rewind a live recording for.

Press ▼ / ▲ button to select Time Shift Size, then press **OK** button to enter sub-menu.

Press the ◀ / ▶ buttons to adjust the size between:

- 0 GB Time shift is disabled
- 512 MB SD recording time of 14 mins, HD recording time of 4 Mins
- 1 GB SD recording time of 28 mins, HD recording time of 8 Mins

Free Record Limit

Press ▼ / ▲ button to select Free Record Limit, then press the ◀ / ▶ buttons to adjust the time for manual recording between 1 and 6 hours.

Reset


This will reset the TV to the factory defaults.

Press ▼ / ▲ button to select Reset, then press **OK** button to enter sub-menu.

Press ◀ to confirm you want to reset or ▶ to cancel.

HDMI CEC

Press ▼ / ▲ button to select HDMI CEC, then press **OK** button to enter the sub-menu.

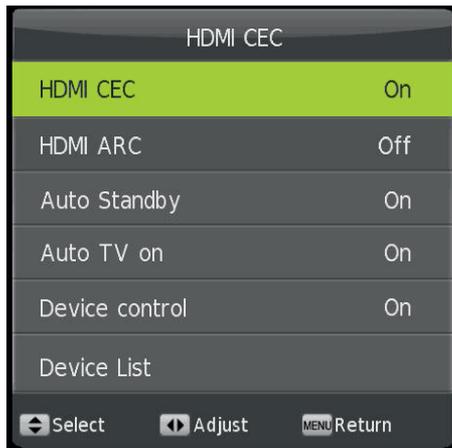

HDMI CEC

Press ◀ / ▶ button to turn the CEC Control on or off.

HDMI ARC

Press ◀ / ▶ button to turn the Audio Receiver Control on or off.

Auto Standby

Press ◀ / ▶ button to turn the Device Auto Standby on or off.

Auto TV On

Press ◀ / ▶ button to turn the Auto TV Power On on or off.

Device control

Press ◀ / ▶ button to turn the Device control on or off.

Device List

Press **OK** button to show list of device.

First Time Installation

This allows you to restart the first time installation process.

Press ▼ / ▲ button to select First time installation, then press **OK** button to start.

Blue Screen

When turned on the screen will be blue if there is no signal, if turned off the screen will be black.

Press ▼ / ▲ button to select Blue Screen, then press the ◀ / ▶ buttons to select On or Off.

Lock Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **Lock** in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **LOCK SYSTEM** menu.
2. Press **OK**/◀ / ▶ button to adjust.
3. After finishing your adjustment, Press **MENU** button to return back to the previous menu

Lock System



Press ▼ / ▲ button to select Lock System, then press **OK** button to make the remaining options valid.


The default password is 0000.

Set Password



Press ▼ / ▲ button to select Set Password, then press **OK** button to enter sub-menu to set new password.

Channel Lock

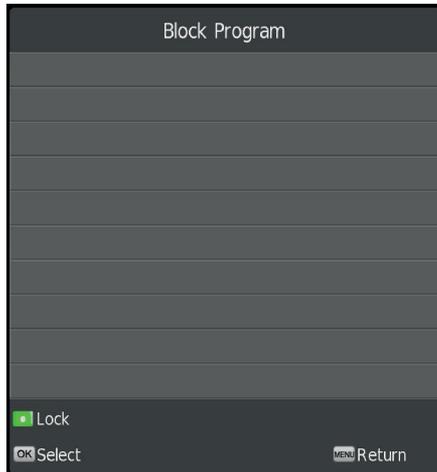


Press ▼ / ▲ button to select Channel Lock then press **OK** button to enter sub-menu to select. Press **Green** button to lock or unlock the channel.

Parental Guidance

Press ▼ / ▲ button to select Parental Guidance, then press the ◀ / ▶ buttons to select the age that is suitable for your children.

Key Lock

Press ▼ / ▲ button to select Key Lock, then press ◀ / ▶ button to select Off or On. When Key Lock is turned on the buttons on the rear of the TV are disabled.

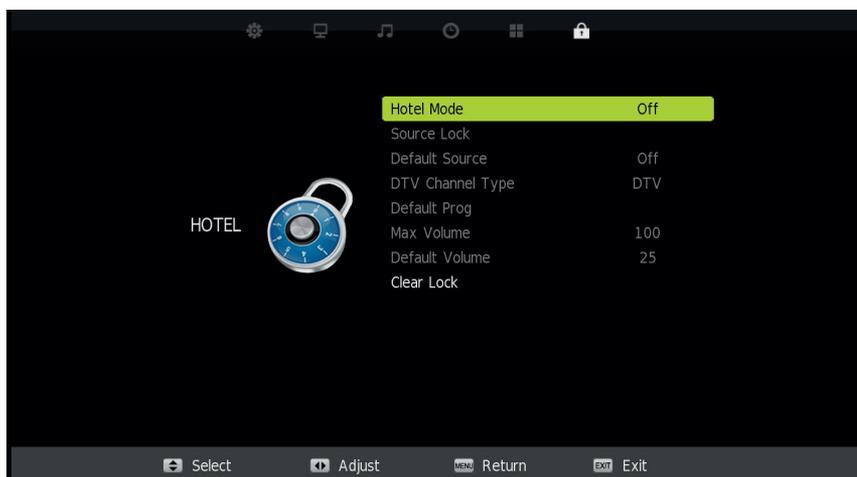

1. Press ▼ / ▲ button on the remote control to select hotel mode in the **Lock** menu.
2. Press OK button on the remote control to enter the sub-menu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu.

Hotel Mode

Press ▼ / ▲ button to select Hotel Mode, then press ◀ / ▶ button to select on or off.

Source Lock

Press ▼ / ▲ button to select Source Lock, then press **OK** button to enter sub-menu to select.

Default Source

Press ▼ / ▲ button to select Default Source, then press **OK** button to enter sub-menu to select.

Default Prog

Press ▼ / ▲ button to select Default Prog, then press ◀ / ▶ button to adjust.

It is available when the default source is TV.

Max Volume

Press ▼ / ▲ button to select Max Volume, then press ◀ / ▶ button to adjust.

Default Volume


Press ▼ / ▲ button to select Default Volume, then press ◀ / ▶ button to adjust.

Clear Lock

Press ▼ / ▲ button to select Clear Lock, then press **OK** button to reset the lock settings to default.

EPG

Press EPG button on remote control to enter EPG menu page.

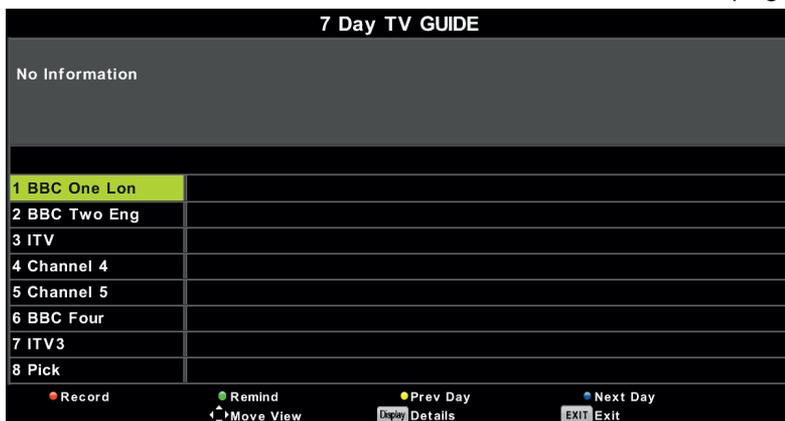

Press ∇ / \blacktriangle navigation buttons to select preferred program.

Press \blacktriangleleft / \blacktriangleright navigation buttons to switch between left column and right column.

When a program is highlighted

Press RED button to record program.

Press GREEN button display information on the highlighted program.

Press YELLOW button to recording schedule.

Press BLUE button to set a reminder.

FAVOURITE LIST

When viewing a channel, press the FAV button on the remote control to enter the Favorite List menu.

Press ∇ / \blacktriangle navigation buttons to select your preferred channel.

Press OK button to confirm the selection.

NOTE:

To add a favourite channel, please refer to the operations of "DTV Mode > Channel > Programme Edit"



Quick select

When viewing an available channel, press OK button on remote control to enter Channel List menu page.

Press UP or DOWN navigation buttons to select preferred channel.

Press LEFT/RIGHT navigation buttons to select a channel group.

Press OK button to confirm the selection.



PC Mode Screen Menu

Press **MENU** button to display the main menu.

Press ◀ / ▶ button to select **SCREEN** in the main menu.



1. Press ▼ / ▲ button to select the option that you want to adjust in the **SCREEN** menu.
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

Auto Adjust

Press **Enter** button to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

H-Offset.

Adjust the horizontal position of the picture.

Press ▼ / ▲ button to select **H-Offset**, then press **OK** button to enter sub-menu.

V-Offset

Adjust the vertical position of the picture.

Press ▼ / ▲ button to select **V-Offset**, then press **OK** button to enter sub-menu.

Size

Adjust the display size.

Press ▼ / ▲ button to select **Size**, then press **OK** button to enter sub-menu.

Phase

Adjust the horizontal interfering lines.

Press ▼ / ▲ button to select **Phase**, then press **OK** button to enter sub-menu.

Position Reset

Press ▼ / ▲ button to select **Position Reset**, then press **OK** button to enter.

Notes:

1. Noise Reduction in PICTURE option is invalid.
2. AD Switch in SOUND option is invalid.
3. TIME menu and description are the same as that for Air mode.
4. Block Program and Parental Guidance in LOCK option is invalid.
5. Audio Languages, Subtitle Language, Hearing Impaired and PVR File System in SETUP option is invalid.
6. PC mode has no CHANNEL menu.

Media Operation

Note: Before operating **Media** menu, Plug in USB device, then press SOURCE button to set the Input Source to **Media** . Press ▼ / ▲ button to select **Media** in the Source menu, then press **OK** button to enter.




Press ◀ / ▶ button to select the option you want to adjust in the main **Media** menu, then press **OK** button to enter.

Photo Menu


Press ◀ / ▶ button to select PHOTO in the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

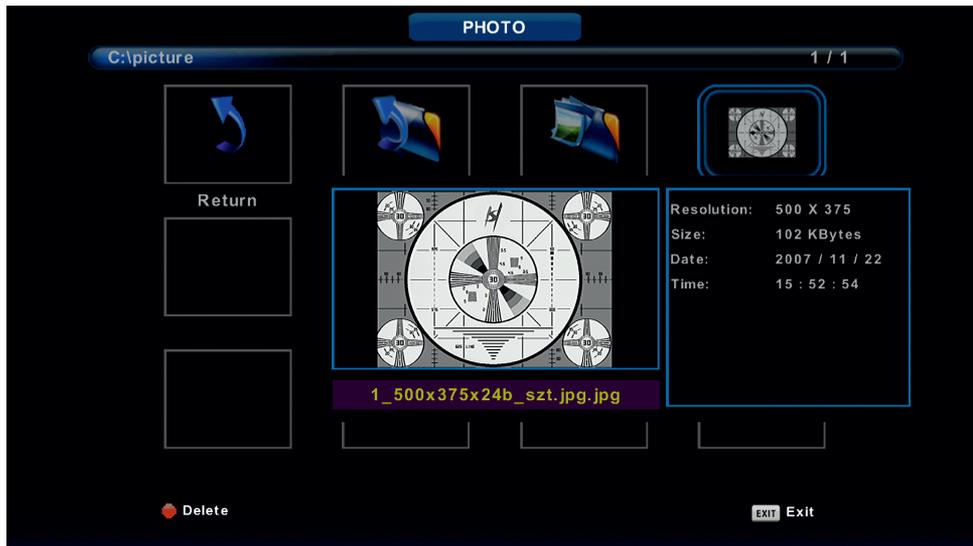

Press ◀ / ▶ button to select the file you want to watch in the file selecting menu, then press media button to display picture.


When highlighting the option you select, the file information will appear on the right and picture will be previewed in the center.

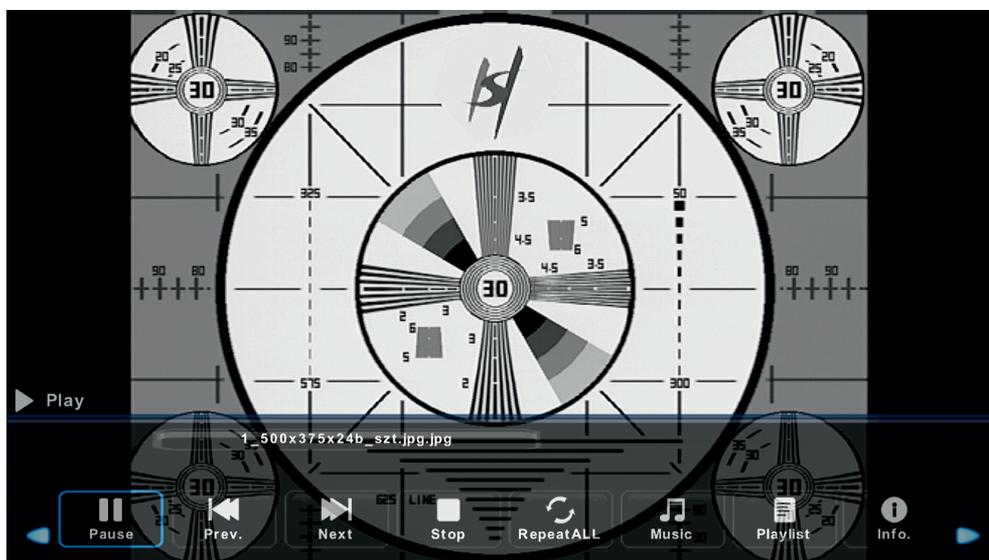

Music Menu


Press ◀ / ▶ button to select MUSIC in the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.

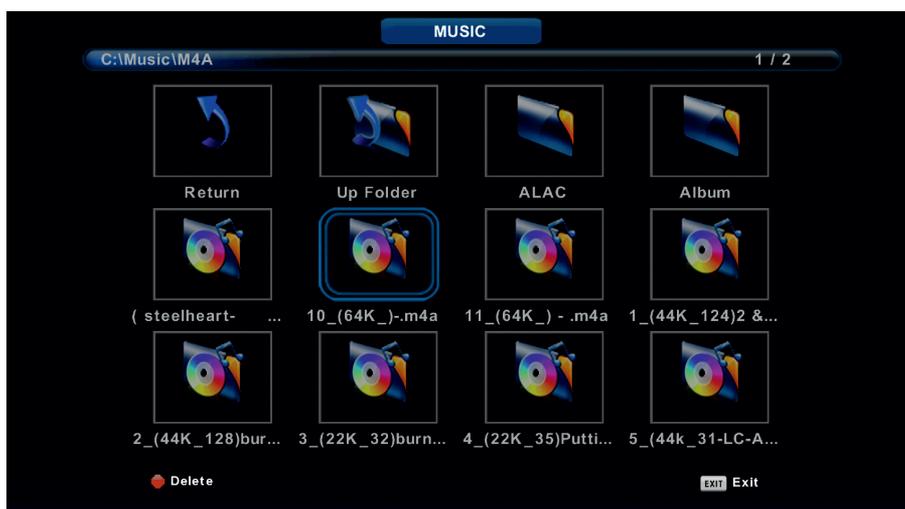

Press ◀ / ▶ button to select drive disk you want to watch, then press **OK** button to enter.

Press ◀ / ▶ button to select return option to the previous menu.

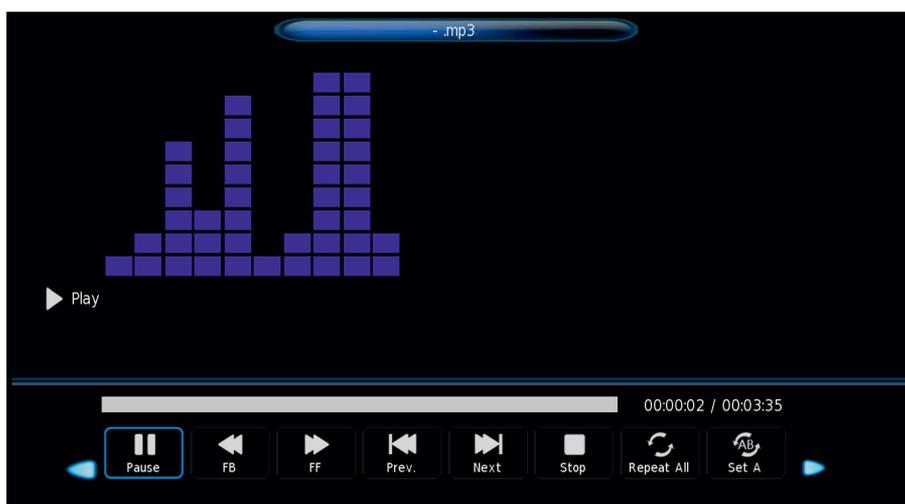

Movie Menu

Press ◀ / ▶ button to select MOVIE in the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.




Press ◀ / ▶ button to select drive disk you want to watch, then press **OK** button to enter.

Press media button to play the selected movie.

Press display button to select menu in the bottom you want to run, then press **OK** button to operate.

Press **Exit** button to back to the previous menu and exit button to quit the entire menu.

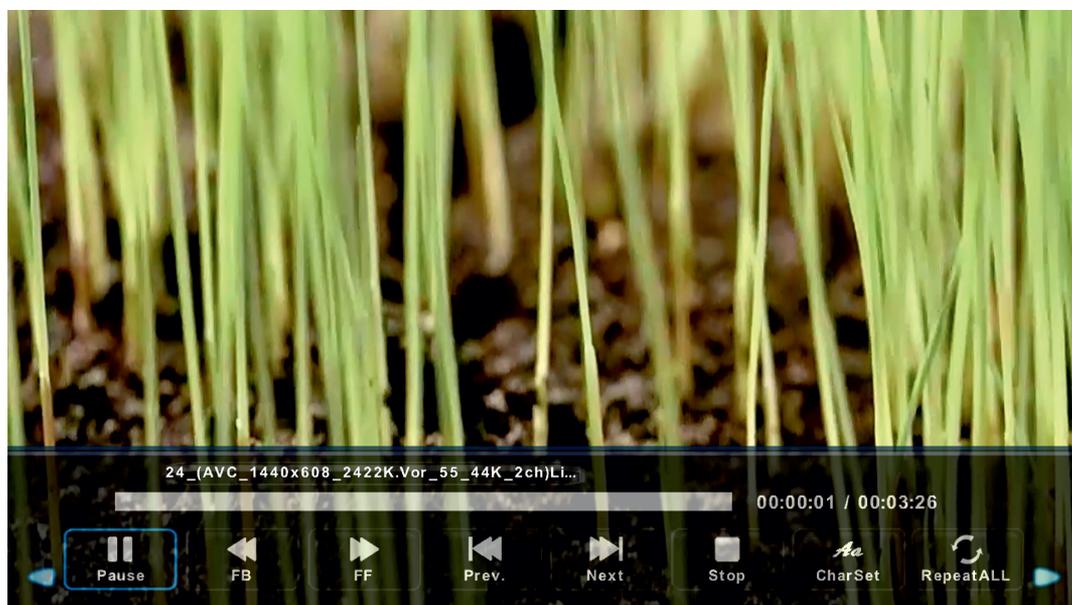

Text Menu


Press ◀ / ▶ button to select TEXT in the main menu, then press **OK** button to enter.

Press **Exit** button to return to the previous menu and exit menu to quit.



Press ◀ / ▶ button to select drive disk you want to watch, then press **OK** button to enter.


Press ◀ / ▶ button to select return option to back to the previous menu.

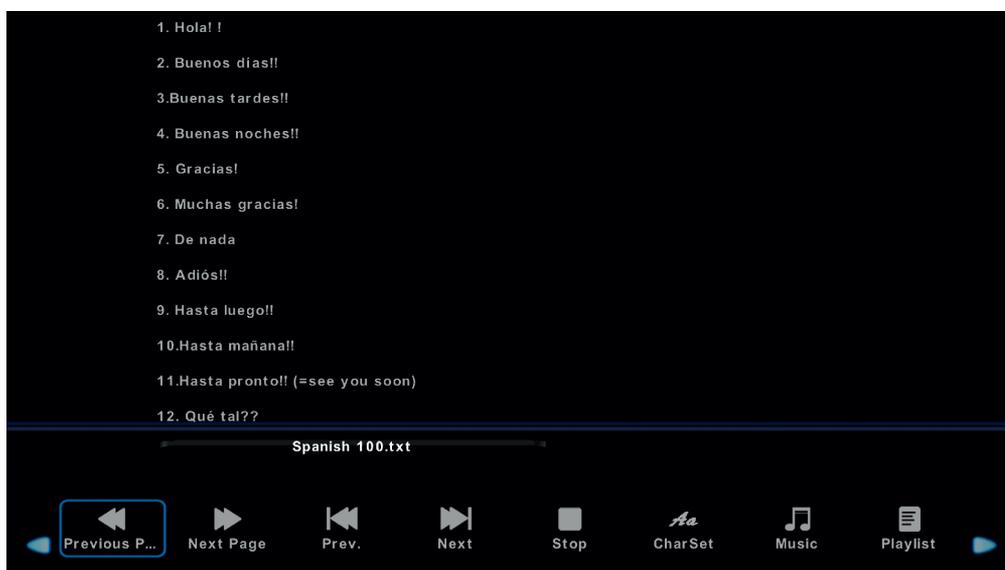

DVD

The DVD settings menu is accessed by the DVD SETUP button, use the up and down buttons to navigate the menu and the left/right buttons to changed items.

1. General Settings page

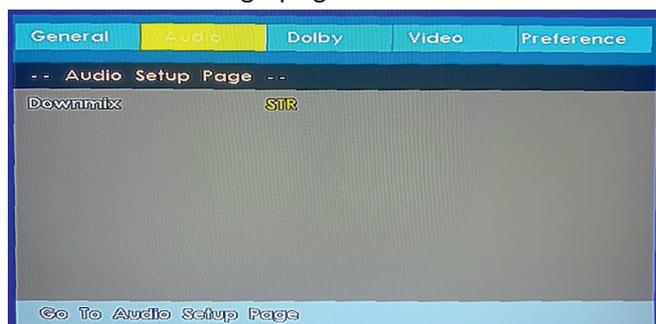

1. TV Display

Some DVD discs have been authored in 4:3 aspect ratio format. To see the material in its original mode, you may need to change the Aspect ratio.

Pan & Scan (4 : 3)

Black edges left and right will be seen.

Letterbox (4 : 3)

Top and bottom of the screen may be black.

Wide 16:9 (Widescreen)

Full width picture but may have black areas top and bottom.

OSD Language.

Select the OSD Language (English is default).

Last Memory. ON/OFF.

You may wish the player to remember where it finished playing a disc and then remove the disc. When you stop the disc, the player will automatically remember the point it finished playing. When the disc is re inserted the player will continue from the same point.

2. Audio Setup

When the DVD menu displayed, the DVD system will auto pause. Press SETUP again, it will go on



A. Press SETUP button on remote control during playing DVD, Press "▶ / ◀" until it will show following menu.

B. Press "▼/▲" to choose the items, then enter the desired item with OK button. It has been set already when the desired item becomes red.


Note: Press Left button to get back the previous menu.

C. Press SETUP to exit the menu.

D. The items of the menu as below.

Downmix: choose the downmix mode. There is only one item--stereo.

6. Preference Setup

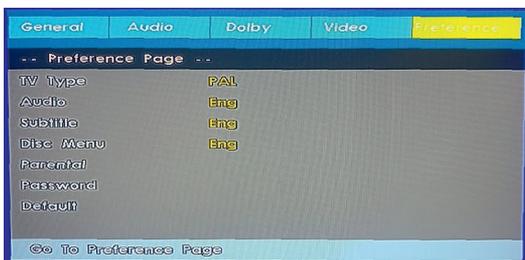

1. TV Type

TV Type:select the colour type from PAL、 AUTO or NTSC.

2 .Audio

Please select the preferred language for DVD audio.

- 1) The selected language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Languages vary between discs,depending on the DVD.You can also select alternative languages by pressing the AUDIO button on the remote

3.Subtitle

Selects the preferred language for subtitles recorded on Discs.

- 1) The selected subtitle language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Subtitles vary between discs, depending on the Discs. You can also select alternative subtitle language by pressing the SUBTITLE button on the remote .

4.Disc Menu:

Select the preferred language for the discmenu recorded on the Discs. This choice varies between Discs.

5.Parental

It is possible to restrict playback of certain Discs to a certain level of user, based on their age, for example. Certain scenes can be blocked or replaced with different scenes. The "Parental Control" function lets you set the access control level. This function is password-protected.

Note: If you play discs that do not support the Parental Control function, the DVD player cannot restrict access to the disc.


6.Password

Change the password to your desired .The default password is 0000 .

7.Default


Restore the DVD player's system to factory default settings.

3. Dolby Setup

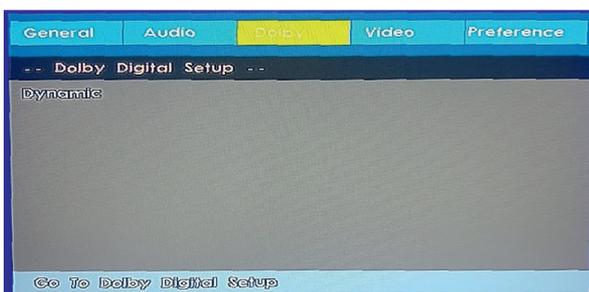

Dynamic is the difference between the maximum level and the minimum level of sounds. this function is generally used when playing high volume programs at night, in order not to disturb the neighbour. This setting can dynamo lower the volume and still keep the original tone quality. This is the range, measured in decibels(dB), between the loudest and the quietest sound registers in a soundtrack.

5. Video Setup

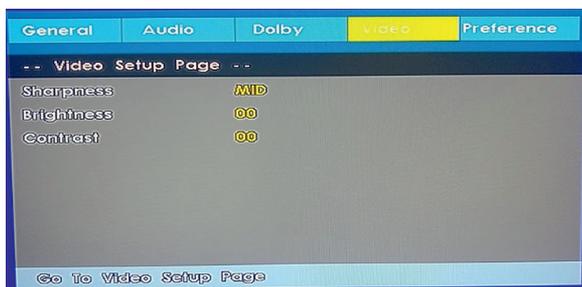

1). sharpness :

adjust the sharpness of the image.

2). Brightness :

Select 'Brightness' by using the “▼/▲” button, then press **ENTER**. You can adjust the Brightness by pressing the “◀/▶” button. To exit 'Brightness' setting, press **ENTER** again to return.

3). Contrast :

Select 'Contrast' by using the “▼/▲” button, then press **ENTER**. You can adjust the Contrast by pressing the “◀/▶” button. To exit 'Contrast' Setting, press **ENTER** again to return.

Troubleshooting

PROBLEM	SOLUTION
No picture or sound	Check the power supply is plugged in and turned on.
Picture is OK but no sound	Make sure the volume is not set to minimum or mute. Turn off the TV and turn back on.
Remote control doesn't work	Check the battery connection is correct. Check the batteries. Make sure no obstacles are between the sensor of the remote and TV
No TV Signal	Check the source is set to ATV or DTV. Check the antenna signal status.
No external video signal	Check the source is set to AV
Picture lacks colour or is too dark	Check colour, brightness and contrast settings
All channels lose colour intermittently	Check the antenna in case it is broken, disconnected or damaged.
Poor reception, loss of colour	Check channel is tuned correctly
Diagonal stripes on picture	Receiver may be affected by interference. e.g. nearby radio broadcasting transmitter or from another TV receiver.
Ghost images appear	Antenna direction may have been changed by a storm or strong wind. Ghost images are caused from both the signal travelling directly from the transmitter and a signal reflected from a hill or large building. Direction of the antenna should be chosen to avoid this situation.
USB media files don't work	FAT 32 formatted flash drive required. Reformat if required.
Time Shift and PVR don't work	FAT 32 formatted flash drive required. Reformat if required.

